



ORDER BY PART NUMBER, NOT CODE NUMBER

CODE NO.	PART NO.	NO. REQ.	DESCRIPTION	CODE NO.	PART NO.	NO. REQ.	DESCRIPTION
1	1876	1	Stopper Assembly (Includes Codes 2 - 6)	29	71022	1	Rotating Shredder Assy
2	1875	1	Stopper, Handle	30	????	1	Upper End Bell Assy
3	1144	1	Gasket, Stopper (Inner)	31	1470	1	Gasket, Tailpipe
4	5015C	1	Body, Stopper	32	8219	1	Tailpipe
5	5045	1	Ring, Retaining	33	5490	1	Flange, Tailpipe
6	5029	1	Gasket, Stopper (Outer)	34	1491	1	Screw, Tailpipe
7	10025B	1	Flange, Strainer	35	4186B	1	Lower Housing
8	1160	1	Gasket, Sink Flange	36	2037	1	Clip, Trim Band
9	5150E	1	Flange, Backup	37	13744	1	Stator Assembly
10	5141	1	Flange, Mounting	38		1	Shaft Assembly (Includes Codes 39 & 40)
11	5147	3	Screw, Backup	39	2642	1	Washer
12	5166	1	Ring, Retaining	40	2467	1	Switch Centrifugal
13	1010A	1	Gasket, Mounting	41	4134	1	Shield Wire
14	5298	1	Flange, Body	42	70360	1	Switch, Start Reverse
15	2567A	1	Trim Cover, Top	43	????	1	Protector, Overload
16	14128	1	Trim Shell, Assembly	44	13759	1	Capacitor
17	8320	1	Insulation	45	71425	1	Clip, Capacitor
18	9872G	1	Body Container Assembly (Includes Codes 20 & 21)	46	70424	1	Lower End Frame Assy (Includes code 48)
19	2439	3	Screw, Body Container	47	9121A	4	Screw, #10-24 Pan Hd
20	8797	1	Clamping Ring	48	2466A	1	Screw, Ground
21	4395	1	Gasket, Shredder	49	71387	1	Cover, Terminal
22	1248A	1	Shredder, Stationary	50	70734	1	Screw, Terminal Cover
23	70647	1	Sleeve 7 Seal Kit (Includes Codes 24 - 28)		13693	1	Installation, Use & Care Booklet (Not Shown)
24	2851	1	Plug			1	Instruction Assy (Not Shown) (Includes Codes 31 - 34 & 51)
25	N/A	1	Bolt, Hex Head Flange				
26	N/A	1	Slinger				
27	N/A	1	Seal				
28	N/A	1	Sleeve				



JAPAN
MODEL No. LC-50-14
100V / 50 / 60Hz

Start Date:	04/98
Engineer Number:	14133C
Rev:	

ORDER BY PART NUMBER, NOT CODE NUMBER

CODE NO.	PART NO.	NO. REQ.	DESCRIPTION	CODE NO.	PART NO.	NO. REQ.	DESCRIPTION