



ORDER BY PART NUMBER, NOT CODE NUMBER

CODE NO.	PART NO.	NO. REQ.	DESCRIPTION	CODE NO.	PART NO.	NO. REQ.	DESCRIPTION
1	1876	1	Stopper Assembly (Includes Codes 2-6)	28	71022	1	Rotating Shredder Assembly
2	N/A	1	Stopper Handle	29	14140	1	Upper End Bell Assembly (Includes Code 34)
3	1144	1	Stopper Gasket (Inner)	30	1470	1	Tailpipe Gasket
4	N/A	1	Body Gasket	31	8219	1	Tailpipe
5	N/A	1	Retaining Ring	32	5490	1	Tailpipe Flange
6	5029	1	Stopper Gasket (Outer)	33	1491	1	Screw
7	10025B	1	Sink Flange	34	14148	1	UEB Insulation
8	1160	1	Seal	35	13691B	1	Bottom Trim Cover
9	5150E	1	Backup Ring	36	14151	1	Stator Assembly
10	5141	1	Mounting Ring	37	14138	1	Rotor & Shaft Assembly (Includes Code 38)
11	5147	3	Screw	38	2642	1	Washer
12	5166	1	Snap Ring	39	2467	1	Centrifugal Switch
13	1010A	1	Mounting Gasket	40	4134	1	Wire Shield
14	5298	1	Body Flange	41	70360	1	Start Reverse Switch
15	2567A	1	Top Trim Cover	42	2267CKZZ	1	Overload Protector
16	14128	1	Trim Shell Assembly	43	13579	1	Capacitor
17	8320	1	Insulation	44	71425	1	Capacitor Clip
18	9872G	1	Body Container Assembly (Includes Codes 20 & 21)	45	70424	1	Lower End Frame Assembly (Includes Code 49)
19	71788	3	Body Container Screw	46	9121A	4	Screw
20	8797	1	Clamping Ring	47	72647A	1	Terminal Cover (includes Code 48)
21	4395	1	Shredder Gasket	48	70734	1	Screw
22	1248A	1	Stationary Shredder	49	2466A	1	Ground Screw
23	70647	1	Sleeve & Seal Kit (Includes Codes 24, 25, 26 & 27)	50	4577	1	Service Wrenchette (Not Shown)
24	N/A	1	Plug	51	13693	1	Installation, Use & Care Booklet (Not Shown)
25	N/A	1	Hex Head Flange Bolt	52	2610TC	1	Instruction Assy (Not Shown) (Includes Codes 30 - 33, 50 & 51)
26	N/A	1	Slinger				
27	N/A	1	Sleeve				